

PRIVACY WITH LATTICE FENCE INSTALLATION INSTRUCTIONS

NOTE: Privacy fences require posthole depths of 24" to 36". Cement will be set around the outside of the post to within 6" of ground level. Two pieces of 1/2" rebar are required in opposite corners of the post, 45" of cement above ground is required inside the posts. Drill small weep holes on the bottom of the rail near the center point to allow water drainage. Place balled newspaper or duct tape at both ends of each rail to prevent cement from seeping into rails.


1. To assemble a 6' wide section, join 5 interlocking privacy panels together by sliding the bottom side edge of a panel into the topside edge of another privacy panel. Slide panels together using interlocking channel. (Figure 1)

Figure 1




2. 2 x 6 grooved rails will be 73" in length. Slide rails onto assembled panels (Figure 2). The top rail will be routed on 2 sides; the side with the narrowest groove will be on top for the lattice installation.

Figure 2

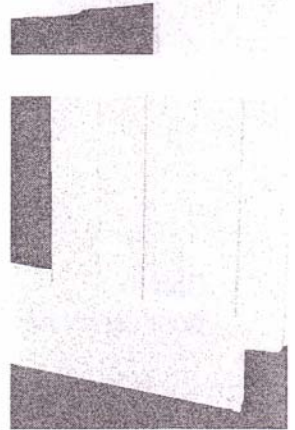


3. Assemble the section by placing the lattice in the groove of the top 2x6 rail and position in the slots in the upper end of the posts. Slide the grooved 1-1/2" x 1-1/2" along the top of the lattice and position in the upper holes on each post. (Figure 3)

Figure 3

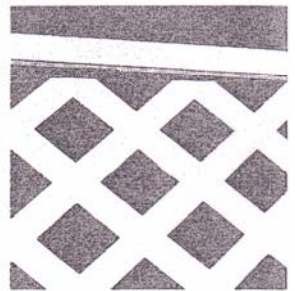

4. The assembled section is shown in (Figure 4).

Figure 4

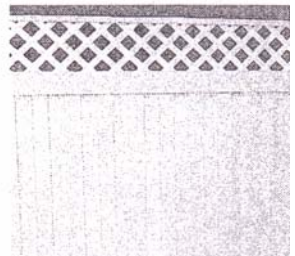


PRIVACY WITH LATTICE FENCE INSTALLATION

INSTRUCTIONS—PAGE 2:


5. Insert notched rails of assembled section into the routed holes of the appropriate (tallest) post.(Figure 5)

Figure 5

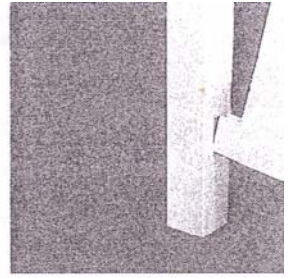


6. Attach outer panels to post with 6- #8 – 3/4" screws (3 per post). (Figure 6)

Figure 6

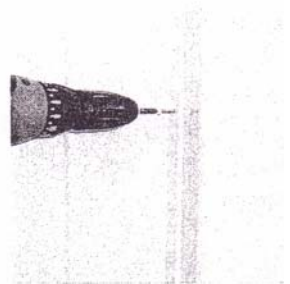

7. Secure top and bottom of each panel using a # 8-3/4" screw (10 total).(Figure 7)

Figure 7

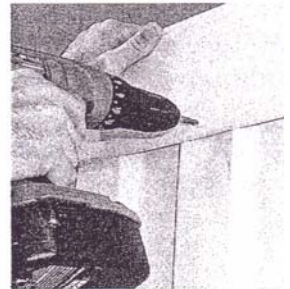

8. Complete the Privacy Section Assembly by gluing post caps onto post. (Figure 8)

Figure 8

